



CT Micro

4N2X, 4N3X, H11BX, TIL113 6Pin Photo Darlington Coupler

Features

- High isolation 5000 VRMS
- CTR flexibility available see order information
- DC input with transistor output
- Temperature range - 55 °C to 100 °C


Applications

- Switch mode power supplies
- Computer peripheral interface
- Microprocessor system interface


Description

The 4N2X, 4N3X, H11BX and TIL113 series consists of a photo darlington optically coupled to a gallium arsenide Infrared-emitting diode in a 6-lead DIP package with bending options.

Package Outline

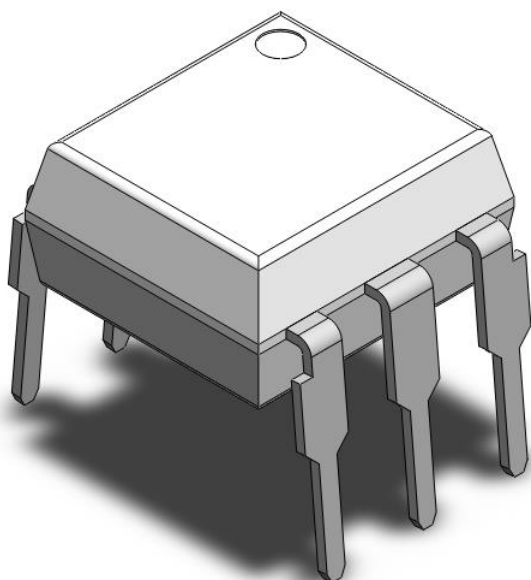

Schematic

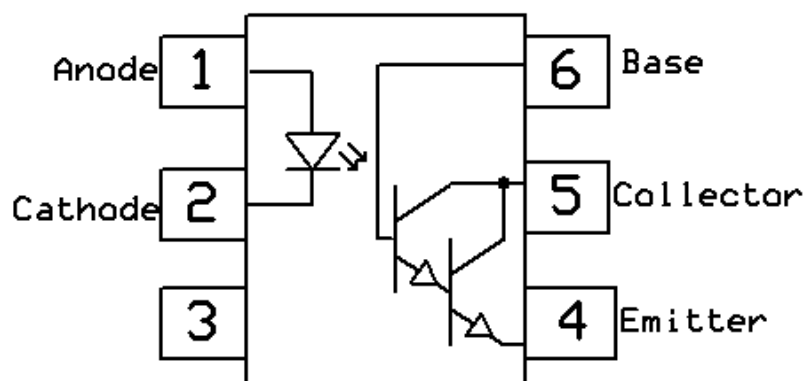

Note: Different bending options available. See package dimension.



CT Micro

4N2X, 4N3X, H11BX, TIL113 6Pin Photo Darlington Coupler

Absolute Maximum Rating at 25°C

Symbol	Parameters	Ratings	Units	Notes
V _{ISO}	Isolation voltage	5000	V _{RMS}	
T _{OPR}	Operating temperature	-55 ~ +100	°C	
T _{STG}	Storage temperature	-55 ~ +125	°C	
T _{SOL}	Soldering temperature	260	°C	
Emitter				
I _F	Forward current	60	mA	
I _{F(TRANS)}	Peak transient current (≤1μs P.W,300pps)	1	A	
V _R	Reverse voltage	6	V	
P _D	Power dissipation	100	mW	
Detector				
P _D	Power dissipation	150	mW	
B _{VCEO}	Collector-Emitter Breakdown Voltage	55	V	
B _{VCB0}	Collector-Base Breakdown Voltage	55	V	
B _{VECO}	Emitter-Collector Breakdown Voltage	7	V	
B _{VEBO}	Emitter-Base Breakdown Voltage	7	V	



4N2X, 4N3X, H11BX, TIL113

6Pin Photo Darlington Coupler

CT Micro

Electrical Characteristics $T_A = 25^\circ\text{C}$ (unless otherwise specified)

Emitter Characteristics

Symbol	Parameters	Test Conditions	Min	Typ	Max	Units	Notes
V_F	Forward voltage	$I_F = 10\text{mA}$		1.2	1.7	V	
I_R	Reverse Current	$V_R = 6\text{V}$	-	-	5	μA	
C_{IN}	Input Capacitance	$f = 1\text{MHz}$	-	45	-	pF	

Detector Characteristics

Symbol	Parameters	Test Conditions	Min	Typ	Max	Units	Notes
$B_{V_{CEO}}$	Collector-Emitter Breakdown	$I_C = 100\mu\text{A}$	55	-	-	V	
$B_{V_{ECO}}$	Emitter-Collector Breakdown	$I_E = 1\text{mA}$	7	-	-	V	
$B_{V_{CBO}}$	Collector-Base Breakdown	$I_C = 100\mu\text{A}$	55	-	-	V	
I_{CEO}	Collector-Emitter Dark Current	$V_{CE} = 10\text{V}, I_F = 0\text{mA}$	-	-	50	nA	

Transfer Characteristics

Symbol	Parameters	Test Conditions	Min	Typ	Max	Units	Notes
CTR	Current Transfer Ratio	4N29, 4N30	100	-	-	%	
		4N31	50	-	-		
		4N32, 4N33	500	-	-		
		H11B1	500	-	-		
		H11B2	200	-	-		
		H11B3	100	-	-		
		H11B255	100	-	-		
		TIL113	300	-	-		
$V_{CE(SAT)}$	Collector-Emitter Saturation Voltage	4N29, 4N30, 4N32, 4N33	$I_F = 8\text{mA}, I_C = 2\text{mA}$	-	-	1.0	V
		4N31, TIL113	$I_F = 8\text{mA}, I_C = 2\text{mA}$	-	-	1.2	
		H11B1, H11B2, H11B3	$I_F = 1\text{mA}, I_C = 1\text{mA}$	-	-	1.0	
		H11B255	$I_F = 50\text{mA}, I_C = 50\text{mA}$	-	-	1.0	
R_{IO}	Isolation Resistance	$V_{IO} = 500V_{DC}$	1×10^{11}			Ω	
C_{IO}	Isolation Capacitance	$f = 1\text{MHz}$		0.25		pF	



CT Micro

4N2X, 4N3X, H11BX, TIL113 6Pin Photo Darlington Coupler

Switching Characteristics

Symbol	Parameters		Test Conditions	Min	Typ	Max	Units	Notes
T _{ON}	Turn On Time	4N2X, 4N3X, TIL113	I _F = 200mA, I _C = 50mA, R _L = 100Ω	-	-	4.7	μs	
		H11BX	I _F = 10mA, V _{CE} = 10V, R _L = 100Ω	-	24	-		
T _{OFF}	Turn Off Time	4N29, 4N30, 4N31	I _F = 200mA, I _C = 50mA, R _L = 100Ω	-	-	30	μs	
		4N32, 4N33, TIL113		-	-	90		
		H11BX	I _F = 10mA, V _{CE} = 10V, R _L = 100Ω	-	17	-		



CT Micro

4N2X, 4N3X, H11BX, TIL113

6Pin Photo Darlington Coupler

Typical Characteristic Curves

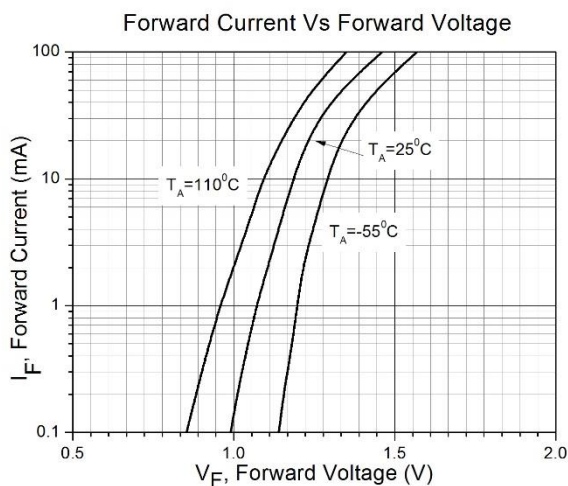


Figure 1

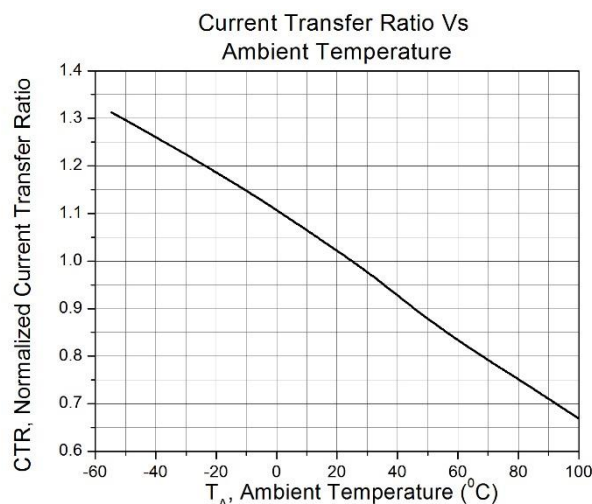


Figure 2

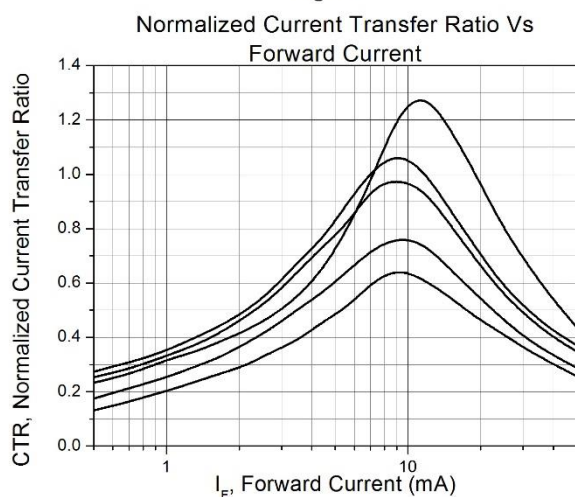


Figure 3

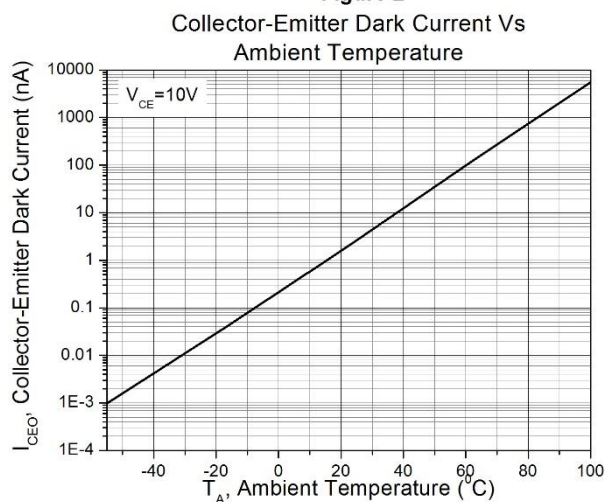


Figure 4

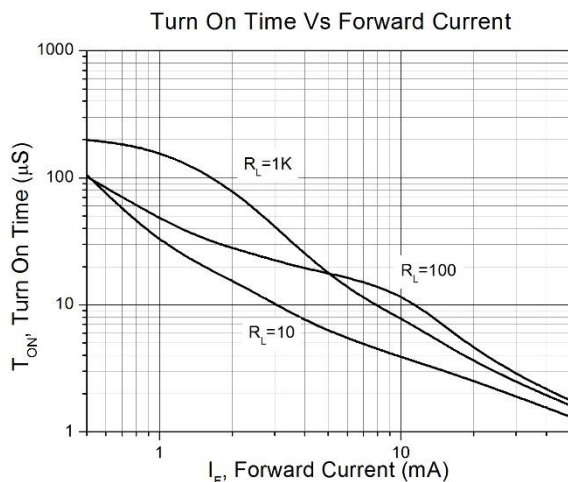


Figure 5

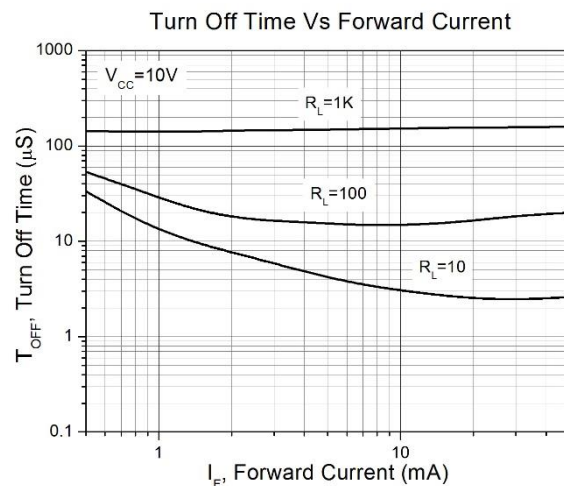


Figure 6




4N2X, 4N3X, H11BX, TIL113

6Pin Photo Darlington Coupler


CT Micro

Package Dimension *Dimensions in mm unless otherwise stated*

Standard DIP – Through Hole

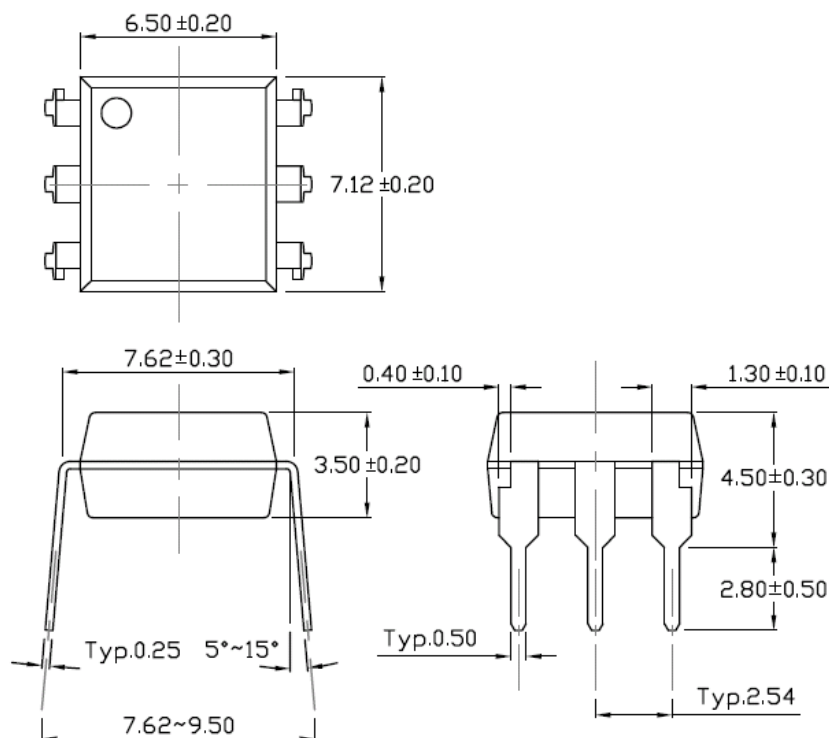

Wide Lead Forming – Through Hole

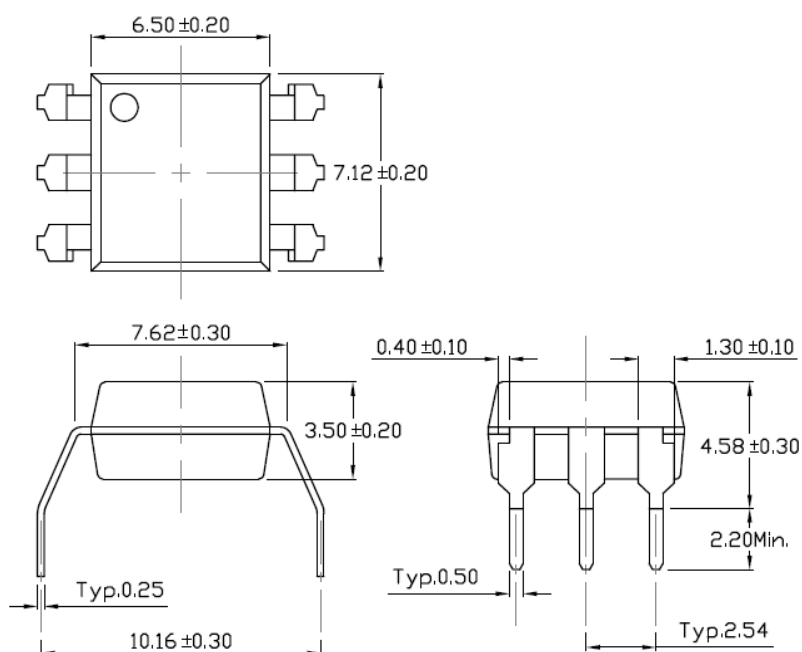





4N2X, 4N3X, H11BX, TIL113 6Pin Photo Darlington Coupler

CT Micro

Surface Mount Forming

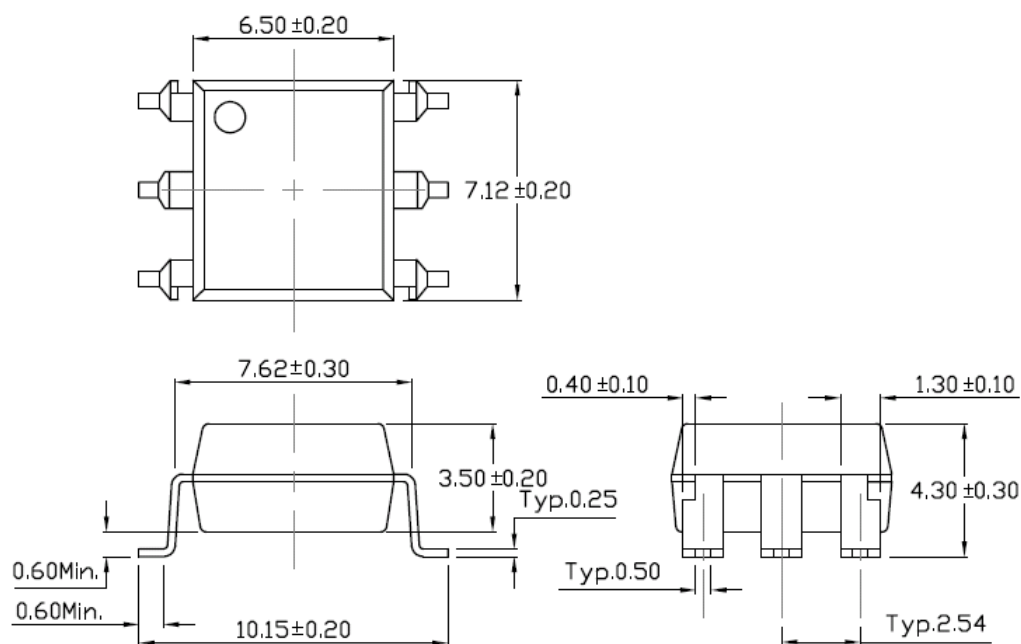

Surface Mount Forming (Low Profile)

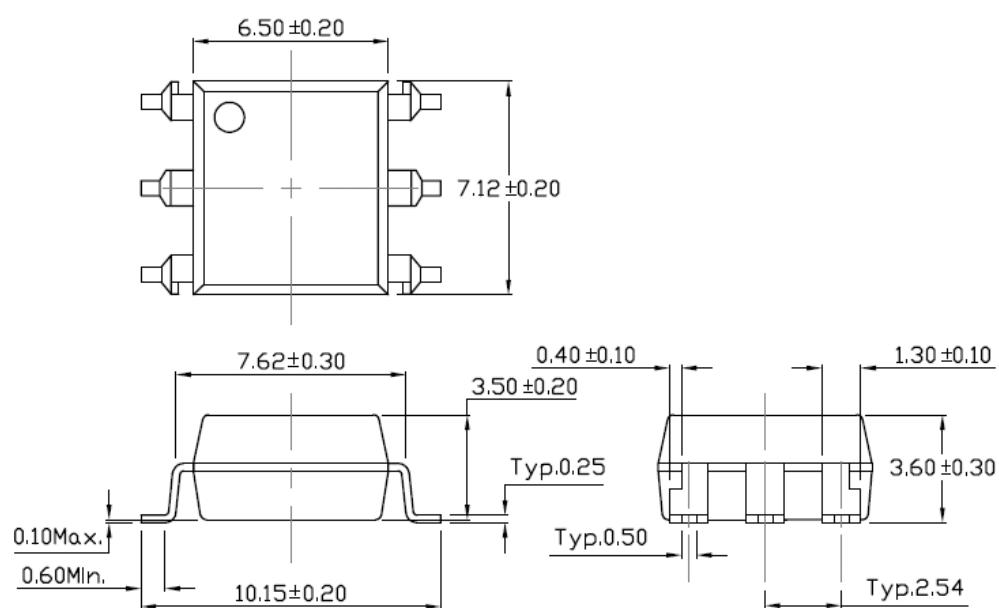





CT Micro

4N2X, 4N3X, H11BX, TIL113 6Pin Photo Darlington Coupler

Recommended Solder Mask *Dimensions in mm unless otherwise stated*

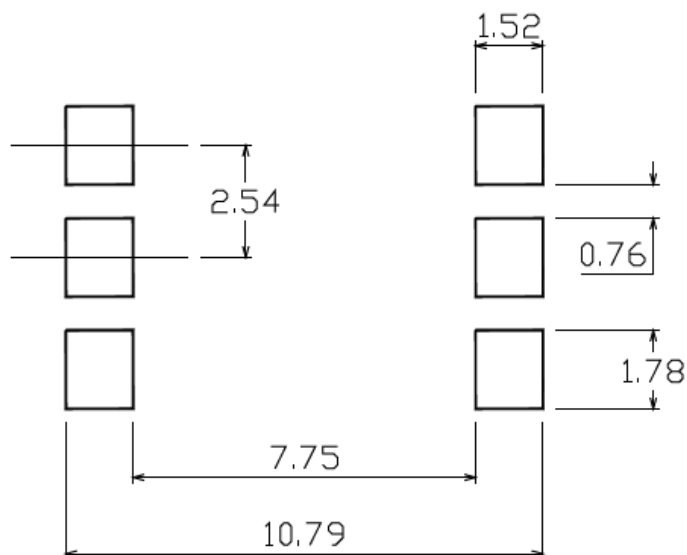

Marking Information

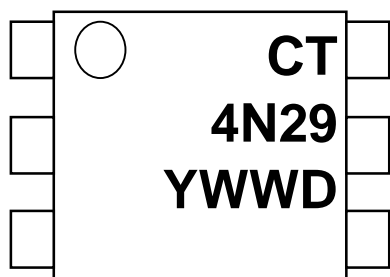

Note:

CT : Logo
4N29 : Product Number
Y : Fiscal Year
WW : Work Week
D : Production Code



CT Micro

4N2X, 4N3X, H11BX, TIL113 6Pin Photo Darlington Coupler

Ordering Information

4N2X(Y)(Z)-G, 4N3X(Y)(Z)-G, H11BX(Y)(Z)-G

X = Part. No. (9 for 4N2X), (0,1,2,3 for 4N3X series), (1,2,3,255 for H11BX series)

Y = Lead form option (S, SL, M or none)

Z = Tape and reel option (TA, TB or none)

G= Material option (G: Green, None: Non-green)


Option	Description	Quantity
None	Standard 6 Pin Dip	50Units/Tube
M	Wide Lead Forming	50Units/Tube
S(TA)	Surface Mount Lead Forming – With Option A Taping	1000 Units/Reel
S(TB)	Surface Mount Lead Forming – With Option B Taping	1000 Units/Reel
SL(TA)	Surface Mount Lead Forming(Low Profile) – With Option A Taping	1000 Units/Reel
SL(TB)	Surface Mount Lead Forming(Low Profile) – With Option B Taping	1000 Units/Reel



CT Micro

4N2X, 4N3X, H11BX, TIL113 6Pin Photo Darlington Coupler

Reflow Profile

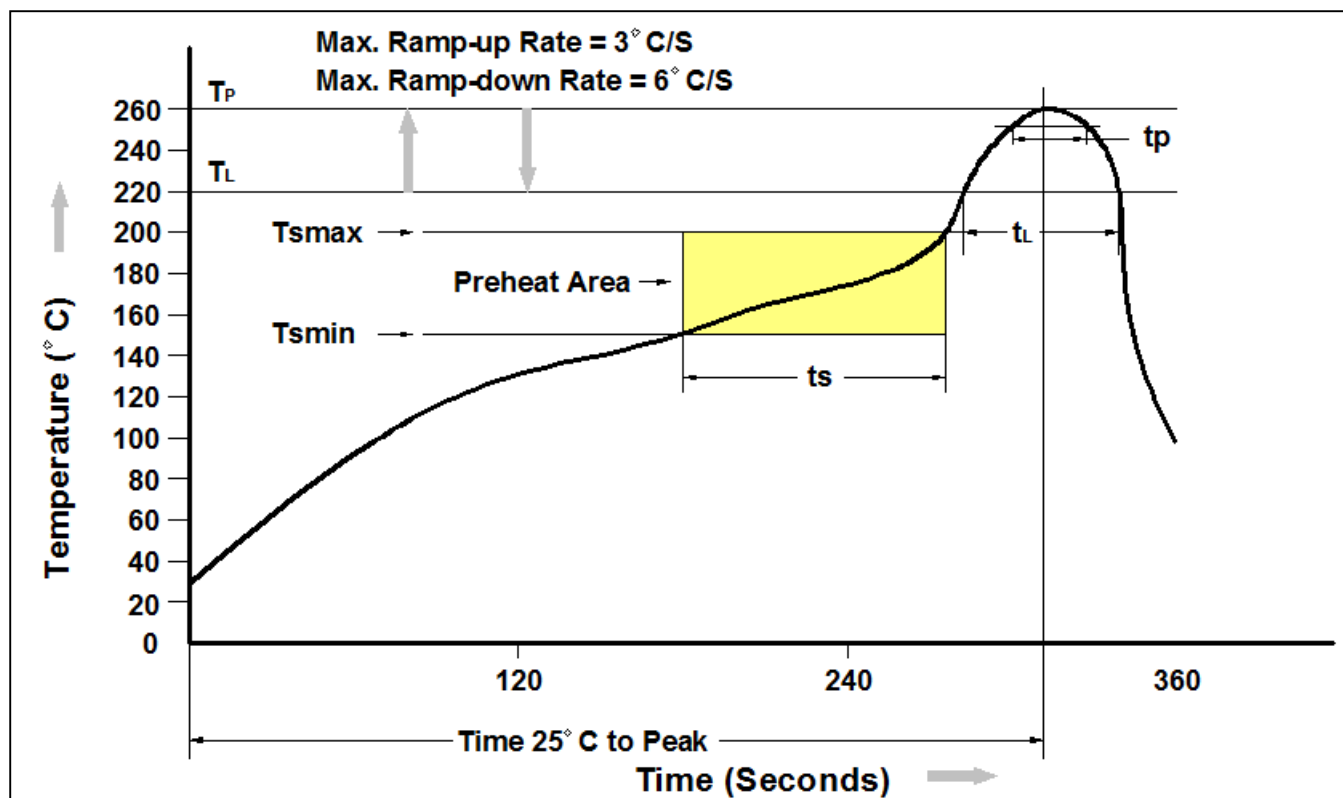

Profile Feature	Pb-Free Assembly Profile
Temperature Min. (Tsmin)	150°C
Temperature Max. (Tsmax)	200°C
Time (ts) from (Tsmin to Tsmax)	60-120 seconds
Ramp-up Rate (tL to tP)	3°C/second max.
Liquidous Temperature (TL)	217°C
Time (tL) Maintained Above (TL)	60 – 150 seconds
Peak Body Package Temperature	260°C +0°C / -5°C
Time (tP) within 5°C of 260°C	30 seconds
Ramp-down Rate (TP to TL)	6°C/second max
Time 25°C to Peak Temperature	8 minutes max.



CT Micro

4N2X, 4N3X, H11BX, TIL113 6Pin Photo Darlington Coupler

DISCLAIMER

CT MICRO RESERVES THE RIGHT TO MAKE CHANGES WITHOUT FURTHER NOTICE TO ANY PRODUCTS HEREIN TO IMPROVE RELIABILITY, FUNCTION OR DESIGN. CT MICRO DOES NOT ASSUME ANY LIABILITY ARISING OUT OF THE APPLICATION OR USE OF ANY PRODUCT OR CIRCUIT DESCRIBED HEREIN; NEITHER DOES IT CONVEY ANY LICENSE UNDER ITS PATENT RIGHTS, NOR THE RIGHTS OF OTHERS.

DISCOLORATION MIGHT OCCUR ON THE PACKAGE SURFACE AFTER SOLDERING, REFLOW OR LONG TERM USE. THIS DOES NOT IMPACT THE PRODUCT PERFORMANCE NOR THE PRODUCT RELIABILITY.

CT MICRO ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT EXPRESS WRITTEN APPROVAL OF CT MICRO INTERNATIONAL CORPORATION.

- 1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, or (c) whose failure to perform when properly used in accordance with instruction for use provided in the labelling, can be reasonably expected to result in significant injury to the user.*
- 2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.*